

Instructions for Use**V90139UCH & V90139UCH2 (Universal Cylinder Holder and O-ring)
Assembly and Disassembly**

Cat. No.: V90139UCHKIT, V90139UCH2KIT

Halkey Roberts Cylinder Holder Assembly Instructions**Assembly**

(See figure)

Step 1: Install cylinder hand tight or to life jacket manufacturers recommendations.

Step 2: Slide the o-ring onto the holder and into the groove.

Step 3: Slide the holder and o-ring over the cylinder, the holder and o-ring assembly should be holding the manifold nut.




Disassembly

(See figure)

Step 1: Slide the holder and o-ring down so it's not holding on to the manifold nut.

Step 2: Unscrew the cylinder from the inflator.

Step 3: Remove the cylinder from holder and o-ring.

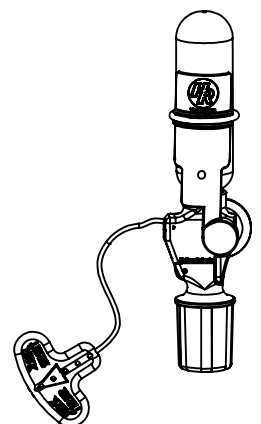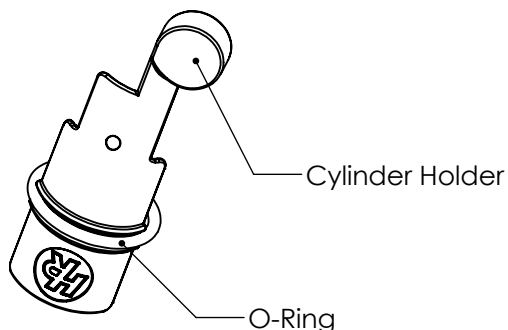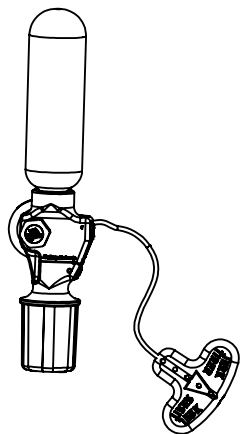



Instructions for Use
V90139UCH & V90139UCH2 (Universal Cylinder Holder and O-ring)
Assembly and Disassembly

Right Handed Side



Left Handed Side

INFLATOR MODEL



V90000

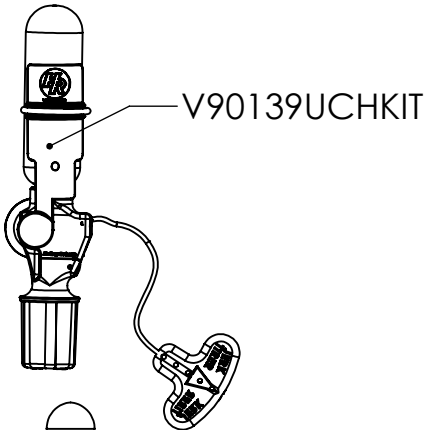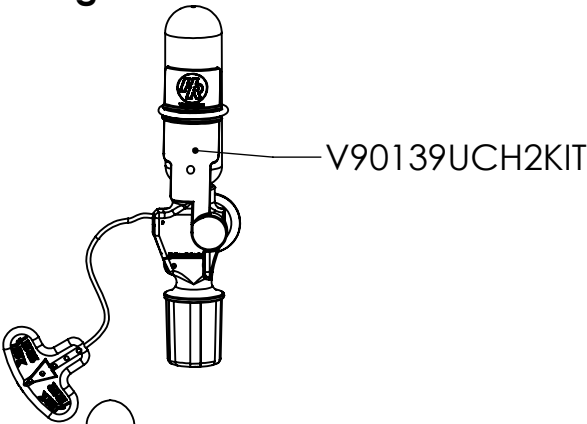


V96000

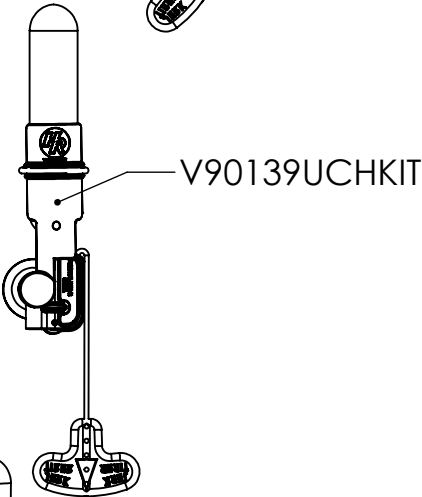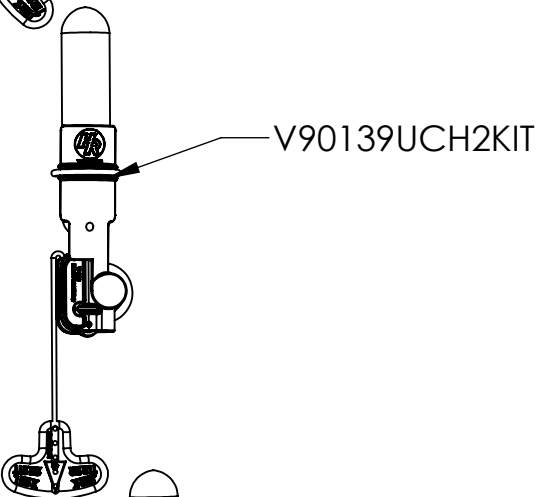

V95000

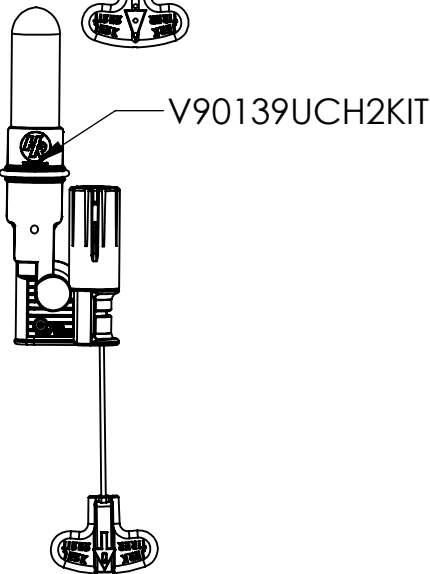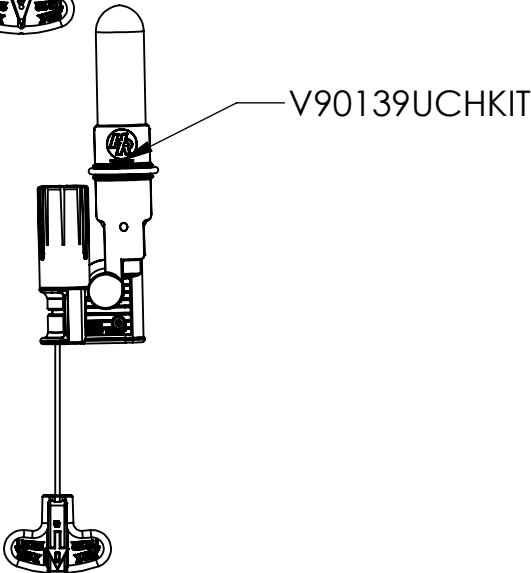

840

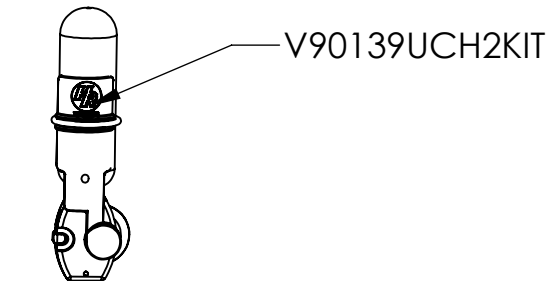

Instructions for Use

V90139UCH & V90139UCH2 (Universal Cylinder Holder and O-ring)
Assembly and Disassembly

	INFLATOR VEST MOUNT	
	RIGHT HANDED SIDE	LEFT HANDED SIDE
INFLATOR MODEL	CYLINDER HOLDER MODEL	
V90000 Series	V90139UCH2	V90139UCH
840 Series	V90139UCH2	V90139UCH
V95000 Series	V90139UCH	V90139UCH2
V96000 Series	V90139UCH2	V90139UCH